

MIDEA  
**HEAT PUMP  
280 LITRE**  
VERSION TWO

**QUICK  
START  
INSTALLATION  
GUIDE**



HEAT PUMP



CONDENSING  
PIPE



PTR VALVE




UV SCREEN  
SHIELD




MANUAL


BOX CONTENTS

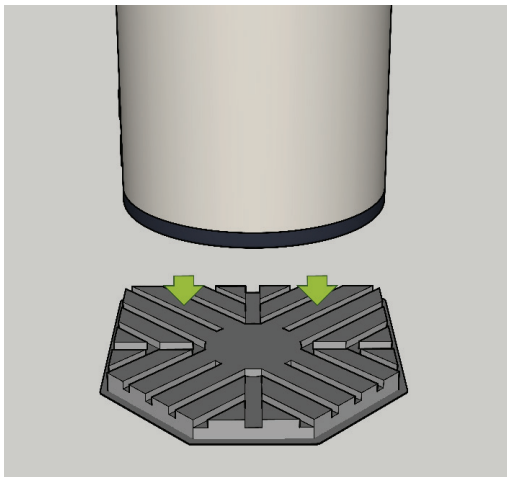


Position unit on a flat sturdy surface able to bear the weight of a permanently fully filled unit (approx 450kg)

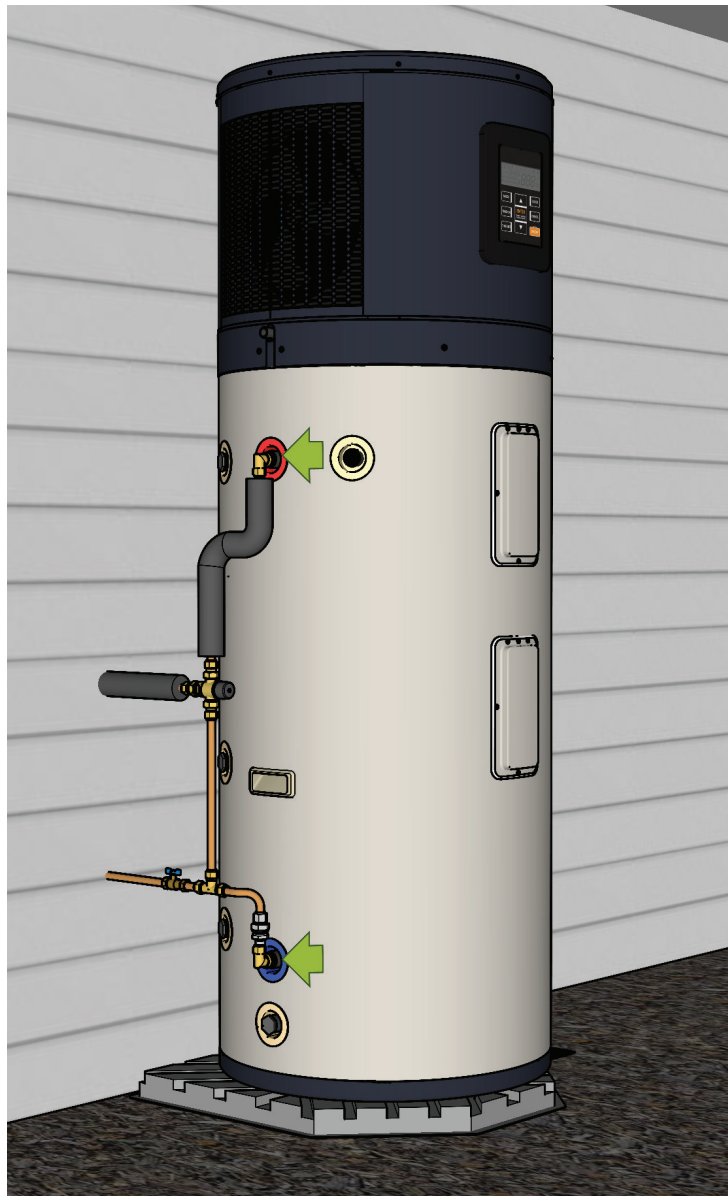


Connect plumbing to the cold inlet and hot outlet using a suitable tempering valve (ensure a non-return valve is used on the cold line)

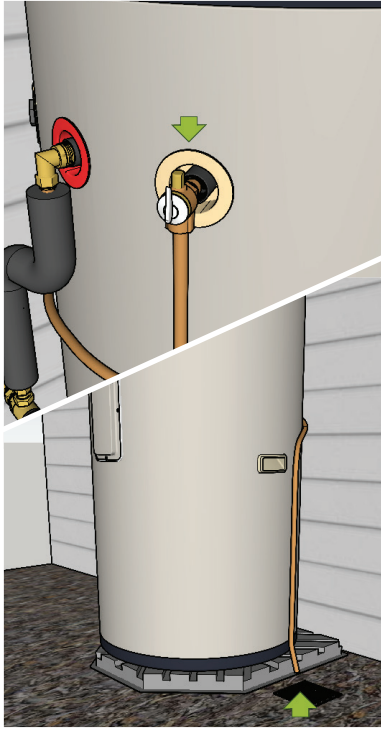


Connect the PTR valve (& drain to legal point of discharge)

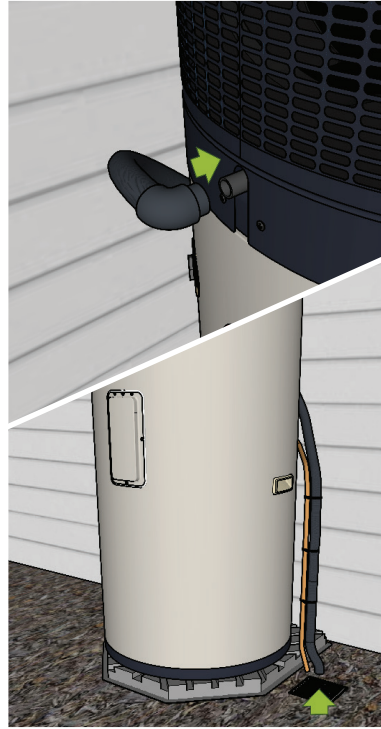

Connect the condensate hose to unit at LHS position & run to suitable location.

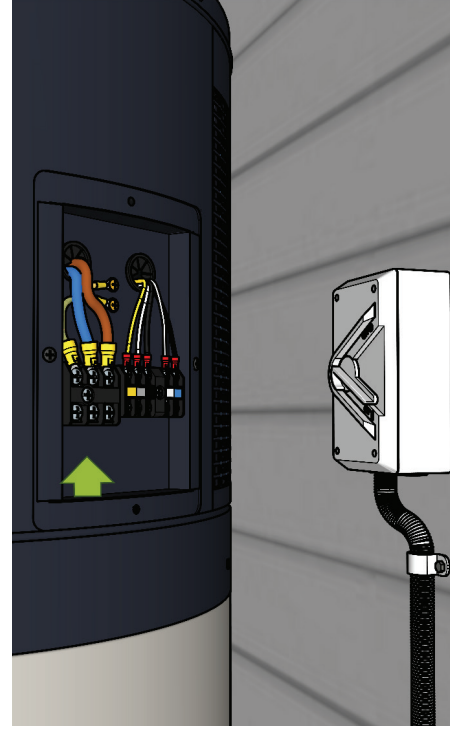


Wire electrics by accessing the electrical compartment and terminating at suitable isolating switch (By authorised electrician)

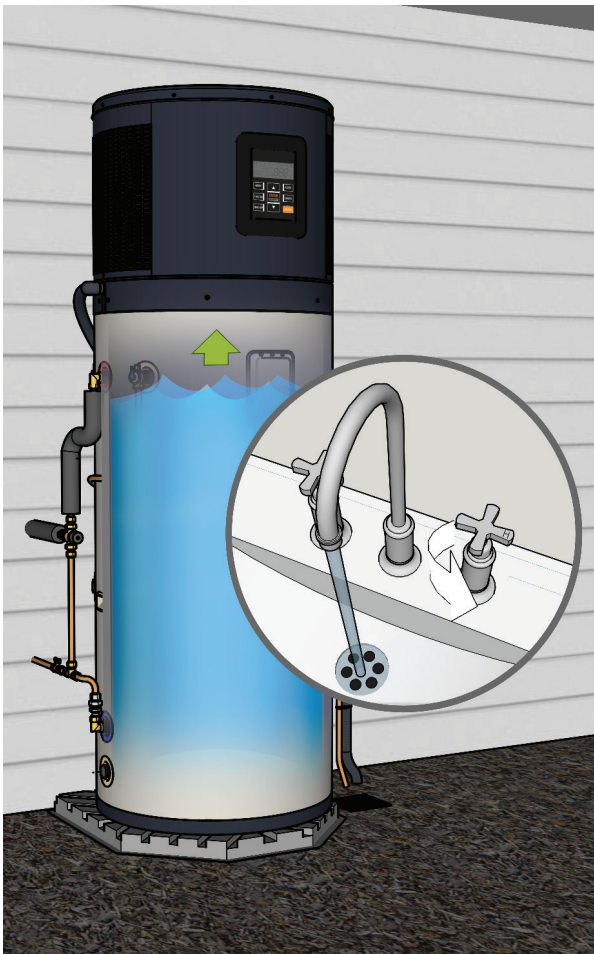

Fill heater with water and bleed air through unit by opening a hot water tap inside the house



Fit UV Screen shield to the control panel

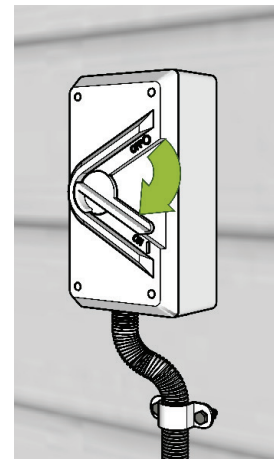

Switch Isolating switch to ON position



Turn heater on by pressing the on/off button (Ensure the red LED is lit up). Heater should start running.